



**INSTALL AND RIDE.
EFI MADE EASY.**

Thank you for purchasing the Electronic Jet Kit (EJK) from Dobeck Performance. This EFI controller is designed to be used on stock or modified vehicles. The following instructions will walk you through a generic installation and go over controller tuning basics. More advanced install instructions, technical information, controller settings, etc...can be found at:

www.ElectronicJetKit.com

**PLEASE BE SURE TO CHECK OUT THE ADJUSTMENT DEMO
LOCATED AT THE BOTTOM OF THE HOME PAGE!!**

**PLEASE READ ALL INSTRUCTIONS BEFORE STARTING
INSTALLATION. BE SURE YOUR VEHICLE'S ENGINE IS COLD.**

IMPORTANT – PLEASE READ CAREFULLY

The EJK is legal ONLY for closed course vehicles. The EJK is not applicable, nor intended for use on Emissions Controlled street, highway or off-road vehicles. The EJK is not applicable, nor intended for use on aircraft.

PACKAGE CONTENTS

- FUEL CONTROLLER
- INSTRUCTIONS SET
- 3 x ZIP TIES
- VELCRO PATCH
- REFERENCE CARD (RED #2)
- EJK Sticker
- Dobeck Performance Sticker

The following are optional parts:

- OXYGEN SENSOR BYPASSES

The following may be purchased separately:

- HANDLE BAR MOUNTING
- DP DOCKING STATION
- USB TO IRDA ADAPTER
- POWERLAB ACCOUNT

Check out updated and advanced information at www.ElectronicJetKit.com

Dobeck Performance · 157 Progressive Drive, Belgrade, MT 59714 USA · Mon-Fri 9am-5pm MST
PH: (406) 388-2377 · Toll Free USA: (877) 764-3337 · Fax: (406) 388-2455 · info@dobeckperformance.com

TUNING INSTRUCTIONS

The EJK controller can be adjusted “on the fly” to tune your vehicle. No computer or other external device is needed to make tuning adjustments. All that is required is for your vehicle to be running which provides power to the EJK controller. Most EJK controllers come pre-programmed to the recommended base light settings which represents a typical stage 1 (intake + exhaust) vehicle modification. **It is recommended to install the EJK controller and take a test ride first before making any mode adjustments.**

Six modes are available to make adjustments. You enter the adjustment mode by pressing the MODE button. Correctly entering the adjustment mode will display flashing LEDs on the LED display. Pressing the MODE button repetitively will move you through all the modes. **Note: The MODE button is sensitive and will at times skip a mode.** Pressing the MODE button at the last mode will bring you back to the first mode. To exit the adjustment mode and return to operation mode you just wait several seconds until the LED display reverts back to solid LED colors.

The six modes available are distinguished by an LED color combination. The six modes in respective order are as follows: Green, Yellow, Red, Green-Blue, Yellow-Blue, and Red-Blue. All six modes have 15 possible light settings. The settings are adjusted by pressing the PLUS (+) and MINUS (-) buttons. For easy reference the LEDs are numbered 1 through 8. Half step settings are represented by two same color LEDs flashing (ex: 4.5 has 4th and 5th LEDs lit). The 0.5 setting is represented by the 1st LED blinking at a much faster rate. Modes 4, 5, and 6 are distinguished by the 8th LED also blinking blue.

Every mode represents an adjustable feature within your vehicle’s drive cycle. Reference the Example Drive Cycle diagram to gain a visual understanding. Each mode can be defined as either a **FUELING mode** or a **SWITCH POINT mode** as follows:

FUELING MODES - Modify the fuel amount compared to the stock fuel when the corresponding zone is active. The higher the light setting the MORE fuel is being added. The lower the light setting the closer you are to running STOCK fuel levels. Light settings for **GEN 3.5** controllers can be **SUBTRACTING** fuel from the STOCK fuel level.

Note: The EJK controller can be set to stock fueling without uninstalling the unit.

GEN 3 controllers – Set the FUELING modes all to light setting 0.5 to revert back to stock.

GEN 3.5 controllers – Stock FUEL settings vary according to application. Check ElectronicJetKit.com for info.

SWITCH POINT MODES – Determine the transition point between two corresponding zones. The higher the light setting the longer it takes for a zone to engage. The lower the light setting the faster a zone will engage.

Note: Switch point modes do not have to be adjusted that frequently.

Mode 1 – GREEN – CRUISE FUEL

Represents fuel modification under CRUISE conditions. When the LED display shows solid GREEN lights then the GREEN zone is active and fuel is modified by this mode. **Mode has the largest affect on fuel mileage.**

Mode 2 – YELLOW – ACCELERATION FUEL

Represents fuel modification under ACCELERATION conditions. When the LED display shows solid YELLOW lights then the YELLOW zone is active and fuel is modified by this mode.

Mode 3 – RED – FULL THROTTLE FUEL

Represents fuel modification under FULL THROTTLE conditions. When the LED display shows solid RED lights then the RED zone is active and fuel is modified by this mode. **Mode has the largest affect on tuning for the vehicle’s top horsepower value.**

Mode 4 – GREEN-BLUE – ACCELERATOR PUMP FUEL – INDICATED BY 8TH LED DISPLAYING BLUE

Represents fuel modification when the Accelerator Pump feature is active. When 8th led shows a solid BLUE light then the Accelerator Pump is working. Fuel amount value is **combined** with other fueling modes to produce final output.


Mode 5 – YELLOW-BLUE MODE – ACCELERATION SWITCH POINT

Represents transition between GREEN and YELLOW zones which relates to cruising and accelerating conditions. The YELLOW zone is load based and engages differently between gears and riding conditions.

Mode 6 – RED-BLUE MODE – FULL THROTTLE SWITCH POINT

Represents transition between YELLOW and RED zones which relates to accelerating and full throttle conditions. The RED zone is load based and engages differently between gears and riding conditions.

EXAMPLE DRIVE CYCLE

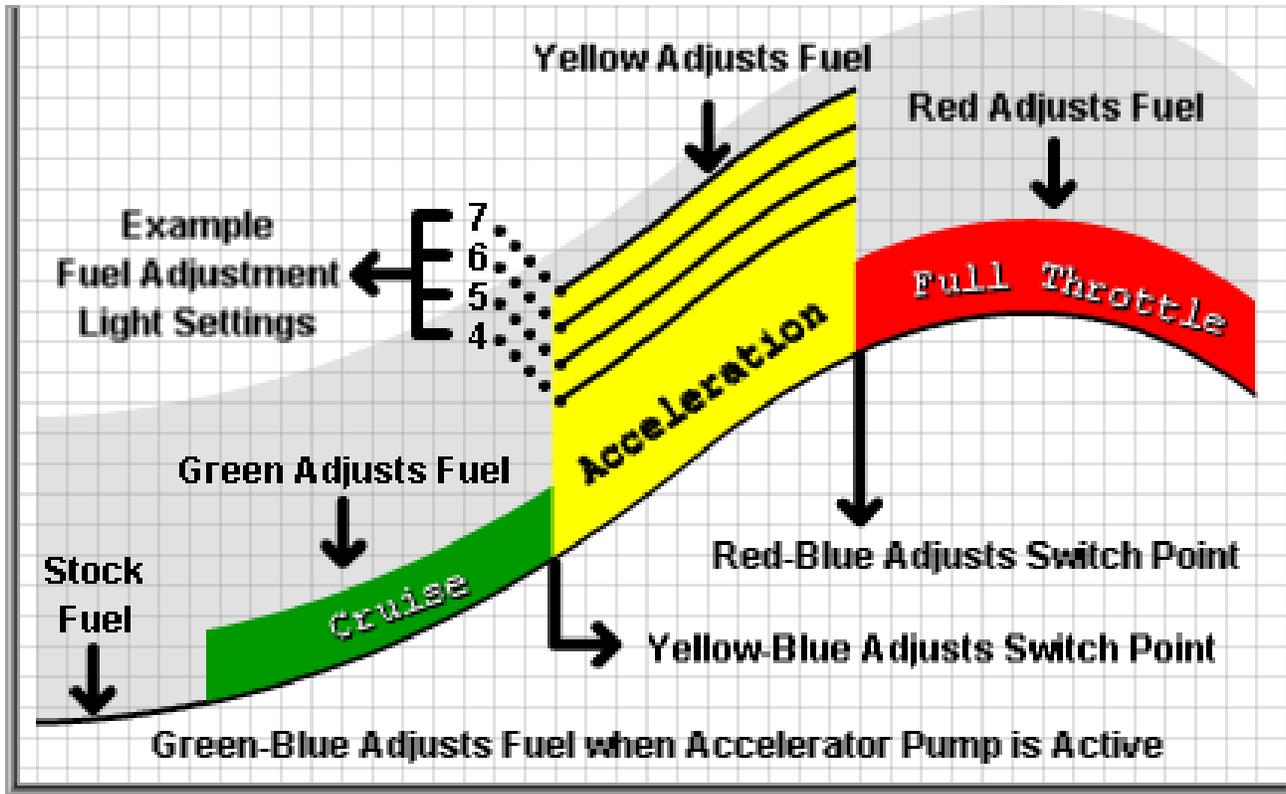

CONTROLLER LAYOUT



RECORD INITIAL RECOMMENDED SETTINGS

We highly suggest recording the preset settings before you start changing any of the modes. Your vehicle will need to be started in order to go through the modes. You can also find the initial preset settings at ElectronicJetKit.com.

GRN	YEL	RED	G/B	Y/B	R/B

Installation Instructions – Polaris RZR 1000 2015

1. Make sure your vehicle is cold before starting the installation.
2. Remove the driver seat, middle engine cover behind the seats and the engine cover located in the box.
3. When removing the cover in the box, take note of the two fuel injectors located right on top of the engine.
4. Determine a location to mount the EFI controller. We suggest either mounting the controller behind the gear shifter or within the battery compartment. Use the supplied Velcro patch to mount the controller.
5. Route and connect the controller's BLACK ground lead to a grounding frame bolt or the negative side of the battery.
6. Route both the injector connection leads on the controller from your mounting location, up through the middle engine cover to the fuel injectors.
7. Disconnect the factory fuel injector connectors from the fuel injectors one at a time. Connect one of the EFI fuel injector connectors in line with the factory fuel injector connection. It does not matter which EFI connector pair goes to which cylinder. For reference though the connector pair with a double pinned RED and YELLOW wires is the controller's channel #1.
8. After connecting the EFI controller check all the wire connections to ensure proper connection. To do this just pull on the connections to make sure they are properly locked in.
9. The controller comes with O2 bypass OX-025 which needs to be installed to properly allow fueling throughout the entire range. Locate the narrowband O2 sensor on the exhaust pipe. Follow the wire harness back to the connectors. Disconnect the connectors and install the O2 bypass. Zip tie the connector going back to the sensor out of the way.
10. Use the supplied zip ties to secure the harness in place and away from hot and moving parts.
 - a. **IMPORTANT: Make sure all connections are firmly secure and allow a little slack at the connections to prevent engine vibration from damaging/breaking a wire on the harness.**
11. Make sure you can view the controller and **START** your vehicle. The LEDs on the controller will energize and may scroll back and forth for several seconds. With a proper installation the controller will stop scrolling the LEDs and go to a steady or slow flashing GREEN LED(s) to the far left. With an improper installation the LED display will consist of a flashing 1st LED GREEN and a flashing 8th LED GREEN. This occurs when the EFI is not receiving a proper injector signal. Re-check the wire connections for any defects.
 - a. **IMPORTANT: The flashing 1st LED GREEN and 8th LED GREEN is common for a proper installation during deceleration, because the stock fuel map may shut off the fuel injectors during this process. This display is also common when just turning the key on. The display is also shown for a couple minutes when turning the key off.**
12. Replace removed components to complete the installation.

Final Installation Note

Re-check your wire routing and the controller location to make certain that in no way the wires can come into contact with any moving parts or high heat source. The controller should be mounted in a way as to not cause a handling problem with the machine.

Troubleshooting

Please make sure you are trying to **START** your vehicle and NOT just turning the key on. If the number 1 LED is flashing green and the number 8 LED is flashing red at **IDLE** then this indicates a connection issue. Re-check the wires from the controller and make sure they are connected to the proper wire of your vehicle's stock harness. The controller only needs power (RED wire) and a proper ground (BLACK wire) to show this error display.

If the motorcycle fails to start then you will also need to re-check the wiring. If you have not connected the ground wire to the negative post of the battery then make sure you have attached the wire to a proper grounding source on the frame.

Support

All controllers are backed by a great support team. First contact your dealer or product representative where you purchased the product and check if they can assist you. If all else fails then feel free to contact the manufacturer directly to gain additional support. Call toll free within the USA at 1-877-764-3337 or 1-406-388-2377 for international customers.