



**INSTALL AND RIDE.
EFI MADE EASY.**

Thank you for purchasing the Electronic Jet Kit (EJK) from Dobeck Performance. This EFI controller is designed to be used on stock or modified vehicles. The following instructions will walk you through a generic installation and go over controller tuning basics. More advanced install instructions, technical information, controller settings, etc...can be found at:

www.ElectronicJetKit.com

**PLEASE BE SURE TO CHECK OUT THE ADJUSTMENT DEMO
LOCATED AT THE BOTTOM OF THE HOME PAGE!!**

**PLEASE READ ALL INSTRUCTIONS BEFORE STARTING
INSTALLATION. BE SURE YOUR VEHICLE'S ENGINE IS COLD.**

IMPORTANT – PLEASE READ CAREFULLY

The EJK is legal ONLY for closed course vehicles. The EJK is not applicable, nor intended for use on Emissions Controlled street, highway or off-road vehicles. The EJK is not applicable, nor intended for use on aircraft.

PACKAGE CONTENTS

- FUEL CONTROLLER
- INSTRUCTIONS SET
- 3 x ZIP TIES
- VELCRO PATCH
- REFERENCE CARD (PURPLE #6)
- EJK Sticker
- Dobeck Performance Sticker

The following are optional parts:

- OXYGEN SENSOR BYPASSES

The following may be purchased separately:

- HANDLE BAR MOUNTING
- DP DOCKING STATION
- USB TO IRDA ADAPTER
- POWERLAB ACCOUNT

Check out updated and advanced information at www.ElectronicJetKit.com

Dobeck Performance · 157 Progressive Drive, Belgrade, MT 59714 USA · Mon-Fri 9am-5pm MST
PH: (406) 388-2377 · Toll Free USA: (877) 764-3337 · Fax: (406) 388-2455 · info@dobeckperformance.com

TUNING INSTRUCTIONS

The EJK controller can be adjusted “on the fly” to tune your vehicle. No computer or other external device is needed to make tuning adjustments. All that is required is for your vehicle to be running which provides power to the EJK controller. Most EJK controllers come pre-programmed to the recommended base light settings which represents a typical stage 1 (intake + exhaust) vehicle modification. **It is recommended to install the EJK controller and take a test ride first before making any mode adjustments.**

Six modes are available to make adjustments. You enter the adjustment mode by pressing the MODE button. Correctly entering the adjustment mode will display flashing LEDs on the LED display. Pressing the MODE button repetitively will move you through all the modes. **Note: The MODE button is sensitive and will at times skip a mode.** Pressing the MODE button at the last mode will bring you back to the first mode. To exit the adjustment mode and return to operation mode you just wait several seconds until the LED display reverts back to solid LED colors.

The six modes available are distinguished by an LED color combination. The six modes in respective order are as follows: Green, Yellow, Red, Green-Blue, Yellow-Blue, and Red-Blue. All six modes have 15 possible light settings. The settings are adjusted by pressing the PLUS (+) and MINUS (-) buttons. For easy reference the LEDs are numbered 1 through 8. Half step settings are represented by two same color LEDs flashing (ex: 4.5 has 4th and 5th LEDs lit). The 0.5 setting is represented by the 1st LED blinking at a much faster rate. Modes 4, 5, and 6 are distinguished by the 8th LED also blinking blue.

Every mode represents an adjustable feature within your vehicle’s drive cycle. Reference the Example Drive Cycle diagram to gain a visual understanding. Each mode can be defined as either a **FUELING mode** or a **SWITCH POINT mode** as follows:

FUELING MODES - Modify the fuel amount compared to the stock fuel when the corresponding zone is active. The higher the light setting the MORE fuel is being added. The lower the light setting the closer you are to running STOCK fuel levels. Light settings for **GEN 3.5** controllers can be **SUBTRACTING** fuel from the STOCK fuel level.

Note: The EJK controller can be set to stock fueling without uninstalling the unit.

GEN 3 controllers – Set the FUELING modes all to light setting 0.5 to revert back to stock.

GEN 3.5 controllers – Stock FUEL settings vary according to application. Check ElectronicJetKit.com for info.

SWITCH POINT MODES – Determine the transition point between two corresponding zones. The higher the light setting the longer it takes for a zone to engage. The lower the light setting the faster a zone will engage.

Note: Switch point modes do not have to be adjusted that frequently.

Mode 1 – GREEN – CRUISE FUEL

Represents fuel modification under CRUISE conditions. When the LED display shows solid GREEN lights then the GREEN zone is active and fuel is modified by this mode. **Mode has the largest affect on fuel mileage.**

Mode 2 – YELLOW – ACCELERATION FUEL

Represents fuel modification under ACCELERATION conditions. When the LED display shows solid YELLOW lights then the YELLOW zone is active and fuel is modified by this mode.

Mode 3 – RED – FULL THROTTLE FUEL

Represents fuel modification under FULL THROTTLE conditions. When the LED display shows solid RED lights then the RED zone is active and fuel is modified by this mode. **Mode has the largest affect on tuning for the vehicle’s top horsepower value.**

Mode 4 – GREEN-BLUE – IDLE SWITCH POINT

Represents transition between STOCK FUELING and the GREEN zone. Light settings correspond to RPM values. The 1st LED will very slowly blink GREEN when no zone is engaged.


Mode 4 – YELLOW-BLUE – ACCELERATOR PUMP FUEL – INDICATED BY 8TH LED DISPLAYING BLUE

Represents fuel modification when the Accelerator Pump feature is active. When 8th led shows a solid BLUE light then the Accelerator Pump is working. Fuel amount value is **combined** with other fueling modes to produce final output.

Mode 6 – RED-BLUE MODE – FULL THROTTLE SWITCH POINT

Represents transition between YELLOW and RED zones which relates to accelerating and full throttle conditions. The RED zone is load based and engages differently between gears and riding conditions.

EXAMPLE DRIVE CYCLE

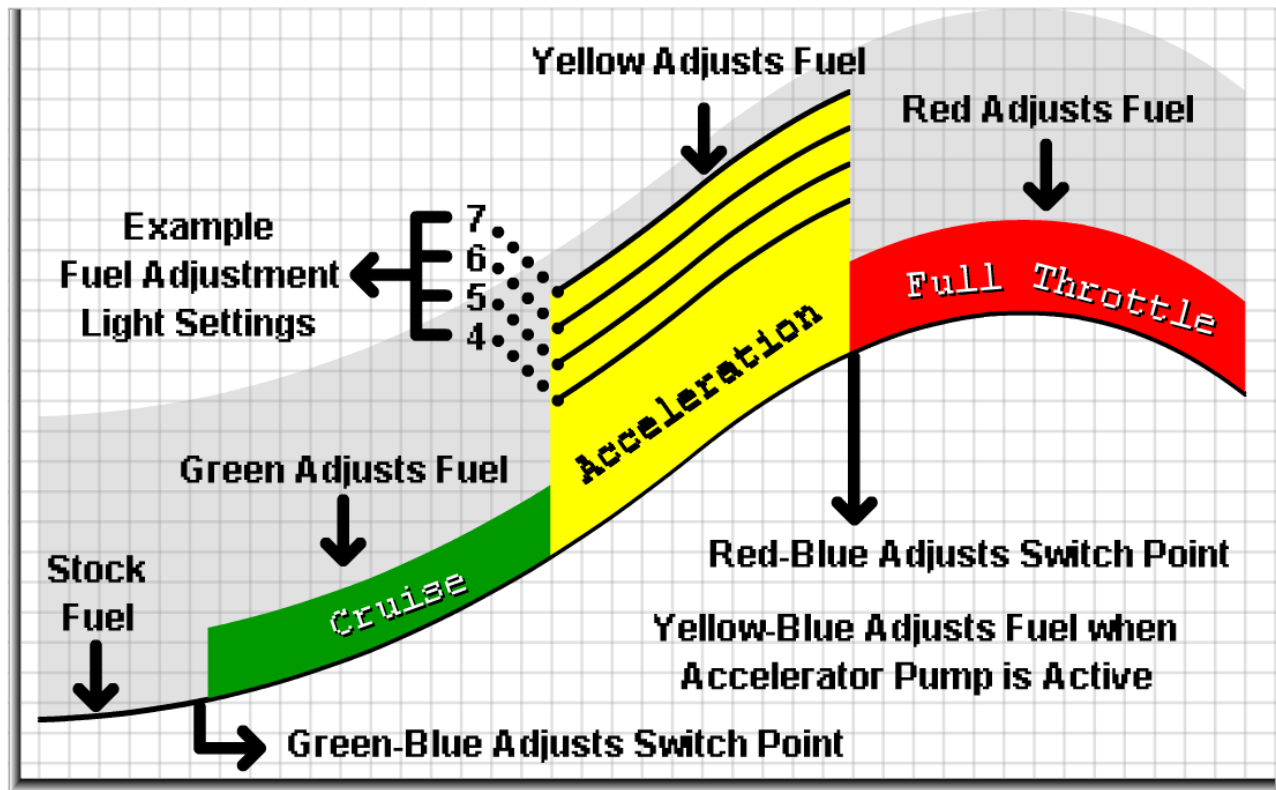

CONTROLLER LAYOUT





RECORD INITIAL RECOMMENDED SETTINGS

We highly suggest recording the preset settings before you start changing any of the modes. Your vehicle will need to be started in order to go through the modes. You can also find the initial preset settings at ElectronicJetKit.com.

GRN	YEL	RED	G/B	Y/B	R/B

GENERIC EJK CONTROLLER INSTALLATION INSTRUCTIONS

1. Make sure your vehicle is cold before starting the installation.
2. If your vehicle is equipped with a battery then remove components to gain access and disconnect the negative lead going to the battery. If your vehicle is not equipped with a battery then locate the common grounding location on the frame of the vehicle.
3. Remove necessary components to locate the fuel injector(s) which are typically on the throttle body. The throttle body is positioned between the engine and the air box. If the application has multiple injectors then there will be multiple throttle bodies. **NOTE: Some applications plug into a sub-harness and NOT directly onto the injectors.**
4. Determine where you will mount the EJK controller. Mount in a safe location that will not affect the operation of the vehicle. Suggested locations are underneath the seat, rear tail section, side covers, etc. **We do suggest keeping the controller accessible for more advanced tuning if necessary.**
5. Attach EJK BLACK ground wire and negative battery cable back to the negative post of battery. If no battery then connect the black ground wire to the common grounding location on the frame.
6. Route the harness along the frame to the injector(s). Make sure to keep the harness away from hot and moving parts. Use zip ties to secure where necessary.
7. Unplug factory connector from the injector. Then plug matching EJK connector on to the injector (these are female connectors). **NOTE: For multiple injector applications it usually does not matter which EFI connector pair goes to which cylinder. For reference though the connector pair with a double pinned RED and YELLOW wire is the EFI's channel #1. For V-Twin engines we do recommend to install channel #1 on the front cylinder. The controller is powered up through the double pinned RED wire.**
8. Plug male EJK connector into the factory female connector. Repeat steps if there are multiple injectors. **Refer to Figures 1 & 2 below. The pictures show an example of a single factory injector harness plugged in. The EJK harness is plugged in line with factory connections.**
9. **IMPORTANT: Make sure all connections are firmly secure and allow a little slack at the connections to prevent engine vibration from damaging/breaking a wire on the harness.**
10. Make sure you can view the EJK and **START** your vehicle. **DO NOT SIMPLY TURN THE KEY ON!** The LEDs on the EFI will energize and may scroll back and forth for several seconds. **Some installations DO have a zero (0) second start-up time and WILL NOT SCROLL.** With a **PROPER** installation the EJK will stop scrolling the LEDs and go to a steady or slow flashing GREEN LED(s) on the left. With an **IMPROPER** installation you may not see any LEDs or you may see the #1 LED flashing along with the #8 LED flashing. Flashing #1 and #8 LEDs occurs when the EJK is not receiving a proper injector signal. Re-check the wire connections for any defects.
IMPORTANT: The flashing #1 and #8 LEDs is COMMON for a proper installation during the following scenarios:
 - De-acceleration - Stock fuel maps may shut off the fuel injectors during this process.
 - Turning the key on – Some ECU systems provide power to the injectors with just the key on.
 - Turning the key off – Some ECU systems perform diagnostic tests for SEVERAL minutes after key off.
11. Replace removed parts in reverse order to complete the installation.

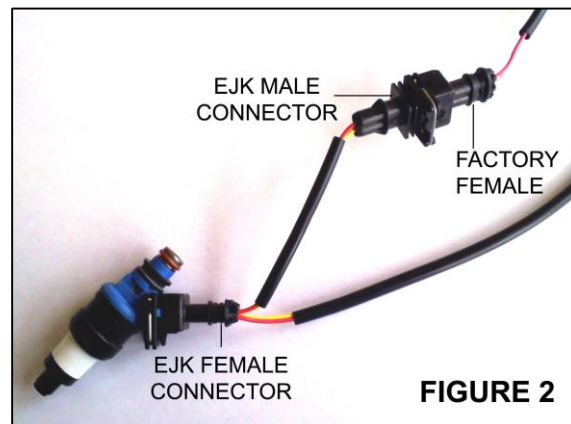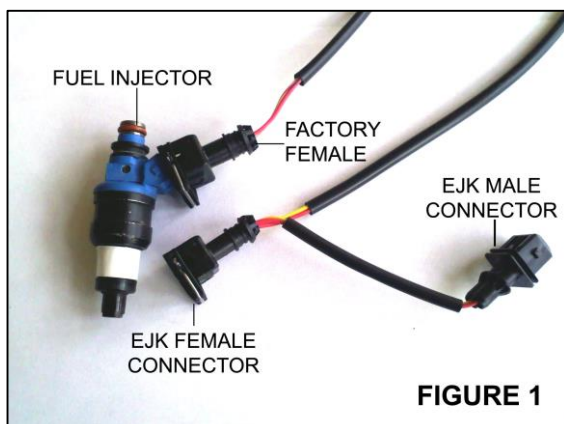

Installation Instructions – Polaris Dragon 2005-2010

1. Make sure the vehicle is completely cool before starting the installation.
2. Remove LH side panel and black cover over the clutch guard to gain access to the ECU. Refer to Figures 1 and 2.
3. Remove the ECU's plug located closer to the engine or center of sled. Refer to Figure 3.
4. When you unplug the ECU's connector, flip it over to see a Yellow wire and a Green wire. Cut back some the wire insulator to gain access to more of the wiring harness. Refer to Figure 4.
5. Cut the Yellow wire leaving room to splice into the harness. Refer to Figures 5 and 6 for wiring steps.
6. Connect the EJK SOLID YELLOW wire into the ECU SIDE of the now cut Yellow wire. Then splice the White with Yellow stripe to the other end of the Yellow (Sled) wire leading to the wiring harness.
7. Next cut the Green wire leaving room to splice into the harness.
8. Connect the EJK SOLID GRAY wire into the ECU SIDE of the now cut Green wire. Then splice the Green with Gray stripe to the other end of the Green (Sled) wire leading to the wiring harness.
9. The EJK RED wire will need to be hooked to the 12 Volt power wire on the sled. There should be two (2) Red/Blue wires in the same connector as the Fuel Injectors. Either Red/Blue wire is a 12 V source. Use the supplied T-tap and spade connector. Refer to Figure 8. **NOTE: MAKE SURE TO NOT CUT THE WIRE COMPLETELY!!**
10. Attach the BLACK ground wire from the EJK on the snowmobile chassis. Refer to Figure 9.
11. Reassembly of the vehicle is the opposite of disassembly.

Final Installation Note

Re-check your wire routing and the controller location to make certain that in no way the wires can come into contact with any moving parts or high heat source. The controller should be mounted in a way as to not cause a handling problem with the machine.

Troubleshooting

Please make sure you are trying to **START** your vehicle and NOT just turning the key on. If the number 1 LED is flashing green and the number 8 LED is flashing red at **IDLE** then this indicates a connection issue. Re-check the wires from the controller and make sure they are connected to the proper wire of your vehicle's stock harness. The controller only needs power (RED wire) and a proper ground (BLACK wire) to show this error display.

If the vehicle fails to start then you will also need to re-check the wiring. If you have not connected the ground wire to the negative post of the battery then make sure you have attached the wire to a proper grounding source on the frame.

Support

All controllers are backed by a great support team. First contact your dealer or product representative where you purchased the product and check if they can assist you. If all else fails then feel free to contact the manufacturer directly to gain additional support. Call toll free within the USA at 1-877-764-3337 or 1-406-388-2377 for international customers.

Figure 1



Figure 2



Figure 3



Figure 4

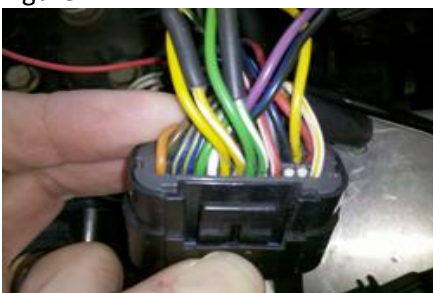


Figure 5

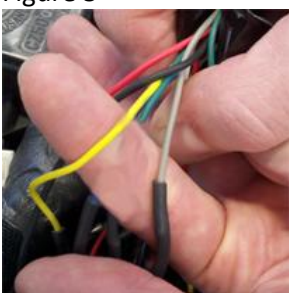


Figure 6

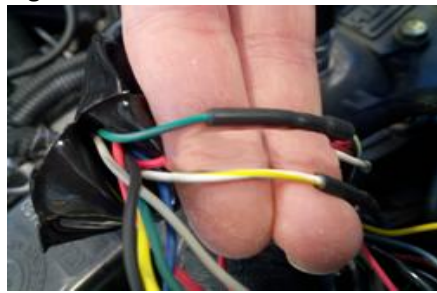


Figure 7



Figure 8

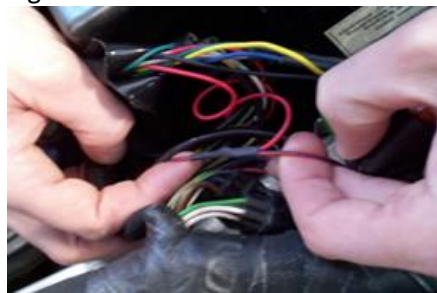


Figure 9

